
 


B-B (2:1)

Make sure the motor cam sits flush with the base as shown.


Lift the nozzle magazine high enough so the cam does not protrude out and tighten the six screws on the sides to secure the magazine to the extrusion.

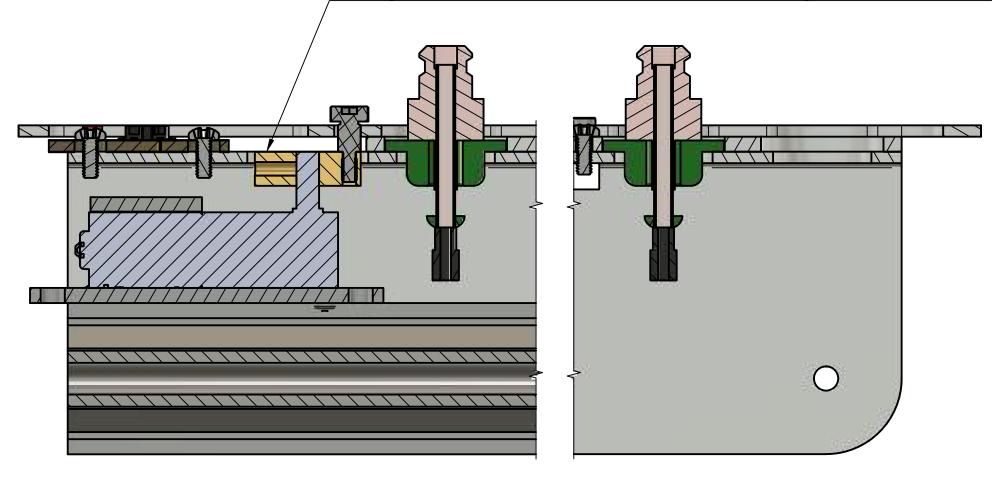




Rapid Star	Assembly Instructions				
Drawn By Deltaprintr	Nozzle Magazine	UNLESS OTHERWISE SPECIFIED, DIMENSION UNITS ARE MILLIMETER OR DEGREE THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DELTAPRINTER INC. ANY REPRODUCTION IN PART OR AS AWHOLE WITHOUT			
Date		THE WRITTEN PERMISSION OF DELTAPRINTER INC IS PROHIBITED.			
8/14/21		Rev.	Date of issue	Sheet	
0/1-/21				2/3	

Loosen the screws and adjust the circuit board left/right so both endstops get triggered. Check to make sure that the cover is fully open when endstop is triggered or else the nozzle will get stuck when being pulled out of the magazine.

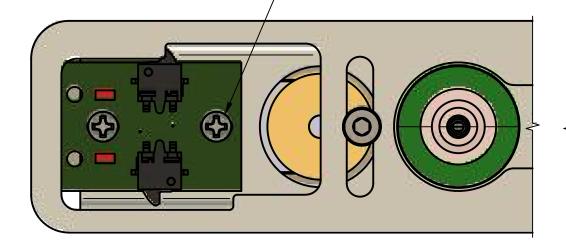

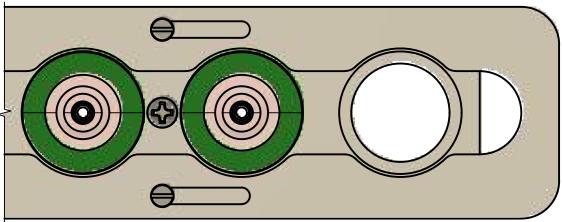

Rapid Star	Assembly Instructions					
Drawn By Deltaprintr	Nozzle Magazine	ARE M THE IN THE SO	UNLESS OTHERWISE SPECIFIED, DIMENSION UNITS ARE MILLIMETER OR DEGREE THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF DELTAPRINTER INC. ANY REPRODUCTION IN PART OR AS AWHOLE WITHOUT			
Date		THE WRITTEN PERMISSION OF DELTAPRINTER INC IS PROHIBITED.				
8/14/21		Rev.	Date of issue	Sheet		
				3/3		